

Hyundai Ioniq 5 N

SPLASH GUARD INSTALLATION

FRONT GUARDS

TOOLS

Clean towel

Alcohol prep pad

Adhesion promoter pad

STEP-BY-STEP


- 1 Thoroughly clean the mounting area shown. Remove heavy debris, then wipe with an alcohol prep pad until the surface is completely free of residue. Allow it to dry.
- 2 Wipe the mounting area with an adhesion promoter pad, then wait at least 30 seconds before installing the guard.
- 3 Use the inside fender edge and the existing screw as alignment guides. Do not remove the screw.
- 4 Peel the tape liner and gently position the guard. Confirm the guard follows the inside edge and the top outer edge is aligned.
- 5 Press firmly along the taped mounting area to activate the adhesive.

INSTALLER NOTE

Adhesion depends on surface preparation. Do not install over dirt, wax, tire dressing, residue, or moisture.



CLEAN THE OUTLINED MOUNTING AREA

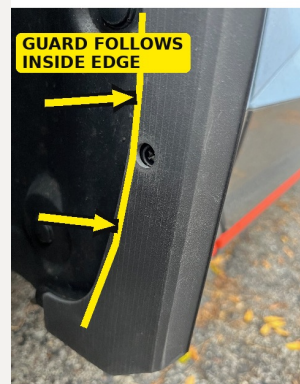

CONFIRM INSIDE EDGE + TOP OUTER EDGE ALIGNMENT



Scan for Megachip support & product info
megachipguards.com

Megachip

High performance splash guards. • 1/2

Hyundai Ioniq 5 N

SPLASH GUARD INSTALLATION

REAR GUARDS

TOOLS

90° ratcheting screwdriver (included)

STEP-BY-STEP

- 1 Using the included 90° ratcheting screwdriver, remove the two lowest screws from the rear wheel well. The rear wheel remains installed.
- 2 Position the rear guard and reinstall both factory screws through the slotted mounting holes.
- 3 Before fully tightening, adjust the guard inward or outward for a flush, even fit.
- 4 Snug both screws evenly. Do not overtighten.

INSTALLER NOTE

Use the slotted mounting holes to fine-tune the guard position before tightening. The guard should sit flush and even.



INCLUDED 90° RATCHETING SCREWDRIVER



REMOVE SCREWS • POSITION GUARD • REINSTALL



Scan for Megachip support & product info
megachipguards.com